

# URIMAT Wall partition TRESPA

---

## Installation instructions



# Items included



2x Bracket (Type A)



2x Bracket (Type B)



2x Fixingscrews



4x countersunk  
head screw



4x Rubber buffer




2x Dowel



1x Anti-theft pin


# Required Tools

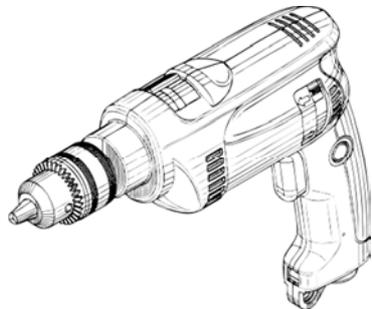

1 x Drill machine



1 x hexagon socket  
wrench (10 mm)

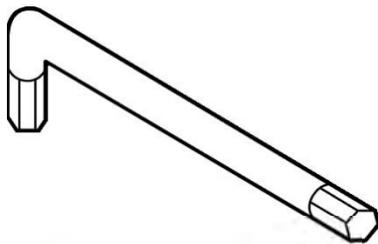


1 x Allen key (4 mm)



1 x Marker

1)

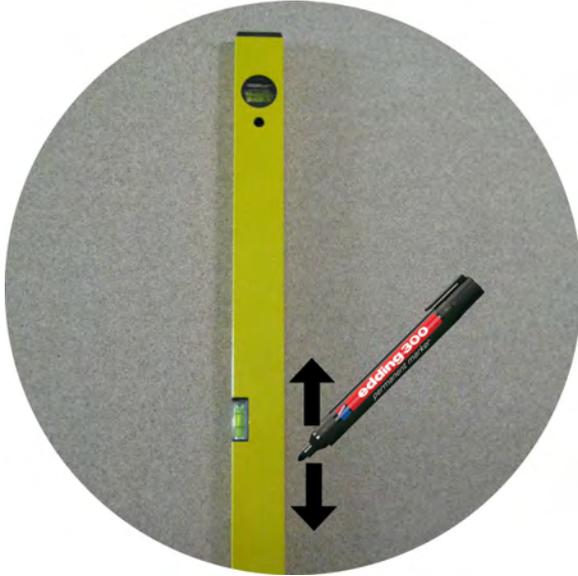

take a spirit level and mark the drill points

recommended drilling height:


Top: 125 cm  
Bottom: 55 cm

2)



Drill chuck: 8 mm

3)

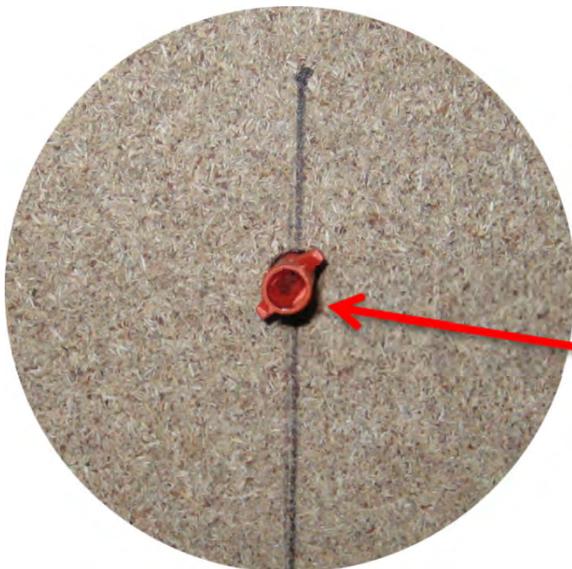


Insert a dowel into the drilled holes

4)



Insert the rubber buffer

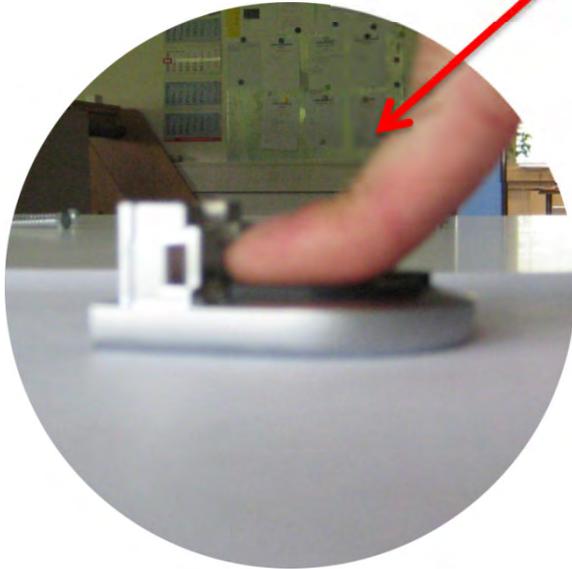

5)




Fix the brackets (Type A) on the top and the bottom with a fixing screw

6)



Insert the anti-theft pin into the hole of one bracket (Type B) for the top

7)

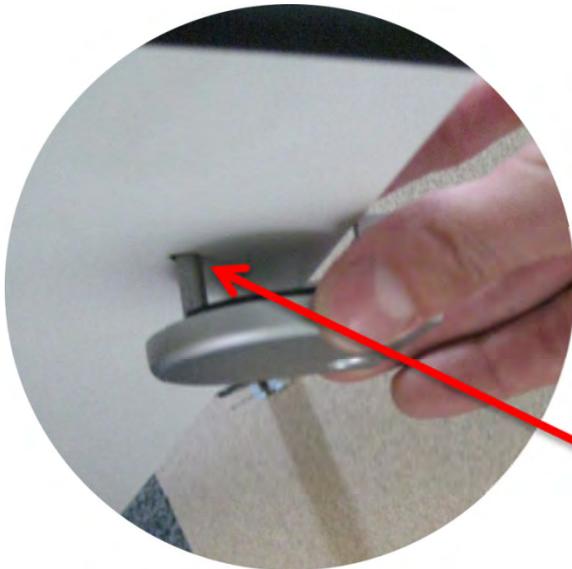

Push the bracket (Type B) with the anti-theft through the wall partition and assemble it with bracket (A)

(Just the bracket at the top)

8)



Now connect the brackets by using the countersunk head screw

(Do the same at the bottom and at the top)

